



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

RENAULT

MOD.

ESPACE*

YEAR

98 →

PETROL
DIESEL

* Models with original equipment keyless entry system

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the wheelhouse, passengers side, in the engine compartment.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, drivers side.

POWER SUPPLY

+30: Connect to the pin at the position nr. B5 of the first connector at the left of the central doors locking unit located on the left of the steering column.
- 31: Connect to the pin at the position nr. B6 of the first connector at the left of the central doors locking unit located at the left of the steering column.

IGNITION WIRE

+ 15/54: Connect to the wire at the position nr. A1 in the connector of the central doors locking unit.

DIRECTION INDICATORS

Connect to the wires located at the positions nr 1 and nr. 2 of the connector coming out of the four direction indicators.

ELECTRIC WINDOWS

Mixed polarity

Front window, drivers side

Cut the WHITE/ORANGE wire (positive control)

Front window, passengers side

Cut the YELLOW/ORANGE wire (positive control) and the WHITE/ORANGE wire (negative control).

Such connections should be made in the wiring harness coming out of the serial switches.

ALARM CONTROLS

For system serie 0144 antithefts

Connect to the wire at the position nr. B1 (B4) for the setting on and to the wire at the position nr. B3 (B5) for the setting off in the light blue connector of the central doors locking unit located on the right of the steering column

IMMOBILISATION POINT 1

Gasoil pump

Cut the WHITE wire located in the wiring harness coming out of the 3 ways connector located on the diesel pump, inside the engine compartment.

IMMOBILISATION POINT 2

Inertial switch

Cut the YELLOW wire located in the wiring harness coming out of the connector of the inertial switch on the wheelhouse, passengers side.

BONNET SWITCH

Install an additional switch on the headlamp support plate.

DOORS SWITCH

Connect to the wire at the position nr. B7, the one on the right of the central door locking unit.

BOOT SWITCH

Connect directly to the wire of the boot lamp coming out of the same.