



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**RENAULT**

MOD.

**ESPACE\***

YEAR.

**01** →

PETROL   
DIESEL

\* Models with original equipment keyless entry system.

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens on the wheelhouse, passengers side.

#### CENTRAL UNIT POSITION

Position the modular systems and the modules under the plastic cover of the dashboard.

#### POWER SUPPLY

**+30:** Connect to the 4 mm<sup>2</sup> RED wire located in a multiway connector, in the fuse box.  
**- 31:** Connect to one of the ground terminals located behind the left lateral bulkhead.

#### IGNITION WIRE

**+15/54:** Connect to the YELLOW wire, at the position nr.17, of the connector marked SS1 coming out of the central placed on the left of the fuses, under the passenger's side cover. As alternative, connect to the 2,5 mm<sup>2</sup> YELLOW wire located in the wiring harness along the steering column.

#### DIRECTION INDICATORS

Connect to the WHITE wire with LIGHT BLUE references, at the position nr.1, and to the WHITE wire with BLACK references, at the position nr.2, located in the wiring harness coming out of the 16 way connector, marked SP and coming out of the central placed on the left of the fuses, under the passenger's side cover.

#### ELECTRIC WINDOWS

##### Mixed motors controls (Art. 2980)

##### Front window, driver's side:

Cut the BLUE/BROWN and BLUE/WHITE wires located in the wiring harness coming out of the connector of the button inside the driver's side door.

##### Front window, passenger's side:

Cut the BLUE/YELLOW and BLUE wires located in the wiring harness coming out of the driver's side door.

#### ACTIV./DEACTIVATION CONTROLS

##### Connections antithefts/vehicle

##### Art.3800

Vehicle	Position	
GREY/BLACK	WHITE/RED	pos. nr.6
YELLOW/BLACK	GREY/YELLOW	pos. nr.7
VIOLET	ORANGE	pos. nr.5
ORANGE	VIOLET	pos. nr.18
VIOLET/WHITE	ground	car body
ORANGE/WHITE	+30	power supply in the fuse box

Refer to the **diagram nr.133**.

#### IMMOBILISATION POINT

##### General ignition wire

Cut the 2 mm<sup>2</sup> YELLOW wire located in the wiring harness coming out of the connector of the ignition key.

#### STARTER

**+50:** Cut the ORANGE wire located in the wiring harness coming out of the 2 way connector placed on the side of the steering column, under the driver's side dashboard.

#### BONNET SWITCH

Install an additional switch on the headlamp support plate, driver's side.

#### DOORS SWITCH

Connect to the LIGHT BROWN wire with RED references, at the position nr. 12, in the connector marked SS1, coming out of the central placed on the left of the fuses, under the passenger's side cover

#### BOOT SWITCH

Connect to the GREEN wire located in the wiring harness coming out of the boot lamp.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°133

Diagram for the connection of art. 3800 on **RENAULT ESPACE**

Art.3800

